


Motor Kit #3521-3522-3535 Instructions Effective: 01-09-06


Order Early For "Quick Delivery" • Call Toll-Free 1-800 Van Mark • Fax-Free 1-888 Van Mark

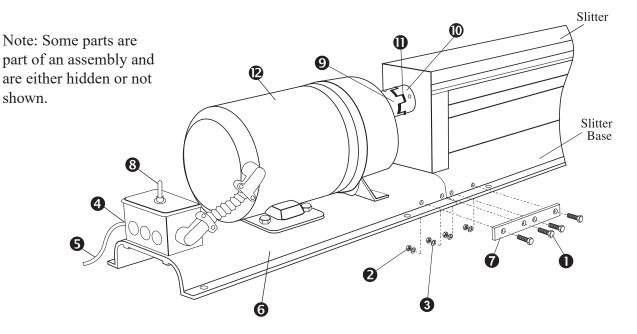

- Step 1. Attach one strap to each side of motor base using two 1/4" x 1" screws, hex nuts and lock washers each. Leave finger-tight for now.
- Slide motor base against slitter base positioning the coupler onto shafts (see detail). Both base members and straps should line up with no gaps or spaces. Ensure coupler slides freely on the shafts.
- Step 3. Using the straps as drill-guides, drill one 1/4" hole and loosely install a screw, lock washer, then a hex nut. Repeat with opposite strap, then remaining two holes (remember to keep both base members aligned with each other with no spaces or gaps). Tighten all screws and hex nuts to complete this step.
- Step 4. Rotate couplers until set screws align with either the keyways or flats on shafts and tighten.

Remove vent plug, install vent. (plug is installed on motor for shipping purposes) Step 5.



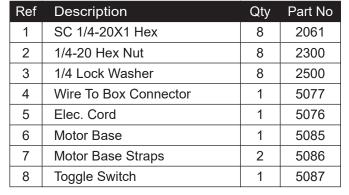

Ref	Description	Qty	Part No
9	Motor Coupler 3535	1	5095
9	Motor Coupler 3521/3522	1	5081
10	Slitter Coupler 3535	1	5080
10	Slitter Coupler 3521/3522	1	5080
11	Coupler Insert 3535	1	5094
11	Coupler Insert 3521/3522	1	5098
12	Motor 3535	1	5084
12	Motor 3521/3522	1	5121

Set Screw

0 0

Detail

Coupler

Flat

Keyway

Slitter

0

Vent -

Keyway

0

Motor



24145 Industrial Park Dr., Toll Free No. 1-800-Van Mark 1-248-478-1200 Phone No.

MI 48335 Farmington Hills, Toll Free Fax. 1-888-Van Mark Area Fax No. 1-248-478-1226 Web Site:www.van-mark.com E-Mail:sales@van-mark.com