


ACCESSORY & BRAKE COMPATIBILITY

Legacy Brake + New Accessory =	Current Brake + New Accessory =	Legacy Brake + Old Accessory =	Current Brake + Old Accessory =
No shims required	Shims required	No shims required	Shims & extended bolts required

Van Mark AccuTrack accessories like the TrimCutter (3017) and TrimFormer (3015) are compatible with most cam-lock Van Mark brakes from 1998 to current.

*AccuTrack accessories are not compatible with cam-lock brakes built before 1998

When we manufacture and ship these accessories, they are configured to fit current model brakes. However, if you plan to use this accessory with a brake manufactured between 1998-2009 you will need to make a minor adjustment.

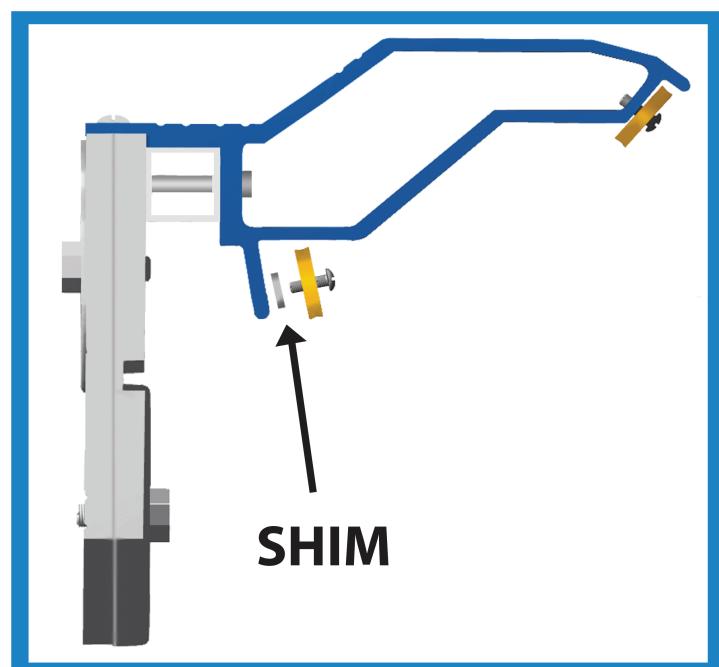

Legacy Brakes - Built between 1998 & 2009

If you have an older brake and a newer accessory: Please remove the the two tracking wheel shims by loosening the bolts that hold the lower wheels on, then replace the guide wheels using the same bolts. You can keep or discard the shims at this point.

Current Brakes - Built after September 2009

No Adjustment is required. You can simply use the accessory as it was configured from the factory.

Shim & Extended Bolt kit = #3036



Van Mark
The Mavk of Quality

F754 AccuTrackShims.ai yk/gw 5212025

24145 Industrial Park Dr.
Farmington Hills, MI 48335

Toll Free: 1-800-Van Mark
Toll Free Fax: 1-888-Van Mark

Email: sales@van-mark.com
van-mark.com

Phone: 1-248-478-1200
Fax: 1-248-478-1226

F754